

# ***Brandt***

EN GUIDE TO INSTALLATION AND USE

## Cooking Hob

# **Brandt**

Dear Customer,

You have just acquired a **BRANDT** hob and we would like to thank you.

We have invested all our dedication and know-how in this appliance so that it would best meet your needs. With innovation and performance, we designed it to be always easy to use.

In the **BRANDT** product range, you will also find a wide choice of ovens, microwaves, ventilation hoods, cookers, dishwashers, washing machines, driers, fridges and freezers, that you can coordinate with your new **BRANDT** hob

Visit our website [www.brandt.com](http://www.brandt.com) where you will find all of our products, as well as useful and complementary information.

**BRANDT**

[www.brandt.com](http://www.brandt.com)

As part of our commitment to constantly improving our products, we reserve the right to make changes to them based on technical advances to their technical and functional features and appearance.



## **Warning**

**Before installing and using your appliance, please carefully read this Guide to Installation and Use, which will allow you to quickly familiarise yourself with its operation.**

• Safety Guidelines _____	04
• Environmental Protection _____	04
• After Sales Service _____	05
• Description of Your Appliance _____	05
<b>1 / INSTALLING YOUR APPLIANCE</b>	
• Proper positioning _____	06
• Building in _____	06
• Hook-up _____	07
<b>2 / USING YOUR APPLIANCE</b>	
• Description of the top _____	08
• Cookware for induction _____	09
• Which cooking zone should you use based on your cookware? _____	09
• Description of control panel _____	10
• Powering on /Stop _____	10
• Adjusting the power _____	10
• Adjusting the timer _____	11
• Child safety use _____	12
• Safety during operation _____	13
<b>3 / DAILY CARE OF YOUR APPLIANCE</b>	
• Protecting your appliance _____	14
• Maintaining your appliance _____	14
<b>4 / SPECIAL MESSAGES, DIFFICULTIES</b>	
• During initial use _____	15
• When powering on _____	15
• During operation _____	15
<b>5 / COOKING CHART</b>	
• Cooking chart for food types _____	16

## • SAFETY GUIDELINES

We have designed this cooking hob for use by private persons in their homes.

These cooking hobs are meant to be used exclusively for cooking beverages and foodstuffs and do not contain any asbestos-based materials.

This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental abilities, or persons lacking experience or awareness, unless using it with the help of a person responsible for their safety, or under supervision and with prior instruction in its use. Children should be supervised to ensure that they do not play with the appliance.

### • Residual heat

A cooking zone can remain hot for several minutes after use.

An "H" is displayed during this period.

Avoid touching the hot areas during this time.

### • Child safety device

Your hob is equipped with a child safety device that locks its operation after use or during cooking (See " Child Safety use" section).

Do not forget to unlock it before using the hob again.

### • For users of pacemakers and active implants

The functioning of the hob conforms to current electromagnetic interference standards and thus is in total compliance with legal requirements (89/336/CEE directives).

In order to avoid interference between your cooking hob and a pacemaker, your pacemaker must be designed and programmed in compliance with the regulations that apply to it.

### For Australia only :

- Young children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended for use by young children or infirm person without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
- Do not install the product if you see any damage on it.

For Service issues, phone number : 1300 553 720, fax number : 1300 553 719

Consequently, we can only guarantee that our own product is compliant.

With regard to the compliance of the pacemaker or any potential incompatibility, you can obtain information from the manufacturer or your attending physician.



### Electrical Danger

**Ensure that the power cables of any electrical appliances plugged in close to the hob are not in contact with the cooking zones.**

**If a crack appears in the glass worktop, immediately disconnect your appliance to avoid the risk of electric shock.**

**To do this, remove the fuses or use the circuit breaker.**

**Do not use your hob until you have replaced the glass worktop.**

## • ENVIRONMENTAL PROTECTION

This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.




Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home. We thank you doing your part to protect the environment.

Any maintenance on your equipment should be undertaken by:


- either your dealer,
- or another qualified mechanic who is an authorized agent for the brand appliances.

When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment.

### • DESCRIPTION OF YOUR APPLIANCE

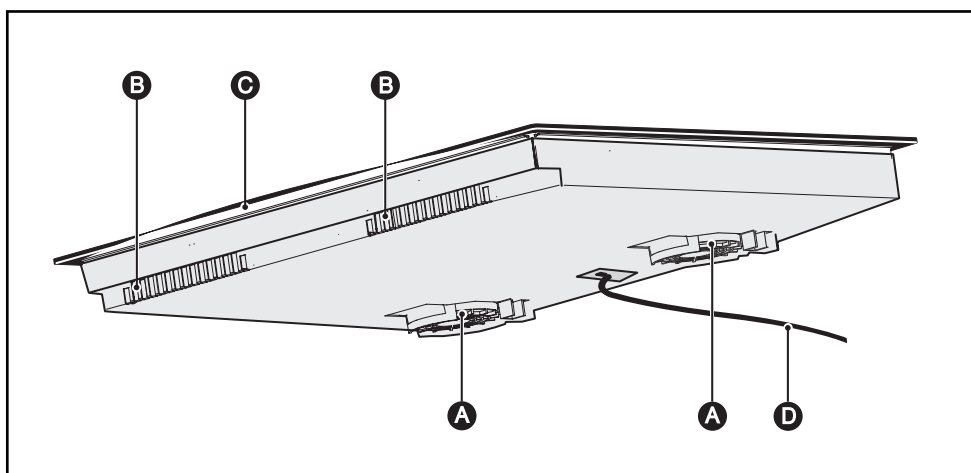

- A** Air intake
- B** Air outlet
- C** Vitroceramic glass
- D** Power cord

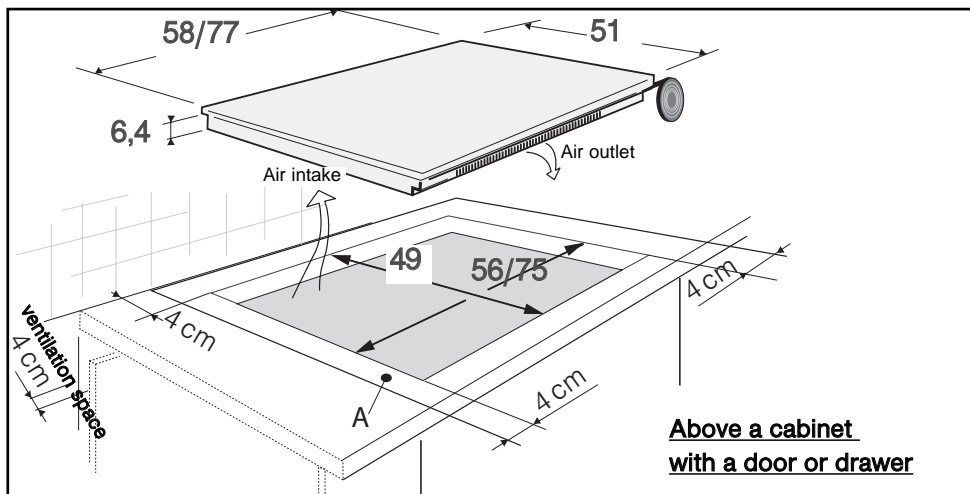

### • CHOOSING THE POSITION

The distance between the edge of your appliance and the side and rear walls (or partitions) must be at least four centimetres (zone A).

Your appliance may be built in without any restriction. Check, however, that the air intake and outlet are free of obstruction (see "description of your appliance" chapter).

The building-in method opposite is recommended for use above an oven or a built-in appliance.

 

### • BUILDING-IN

Follow the diagram above.

Glue the foam seal underneath your appliance, following the perimeter of the hole in the worktop, upon which your appliance will rest. This will ensure a good seal against the worktop.

Attach the clips to the hob (depending on the model).

On 30, 38, 80 and 90 cm models, ensure that the upper rail across the front of the cabinet does not impede the air flow. If necessary, cut a chamfer.

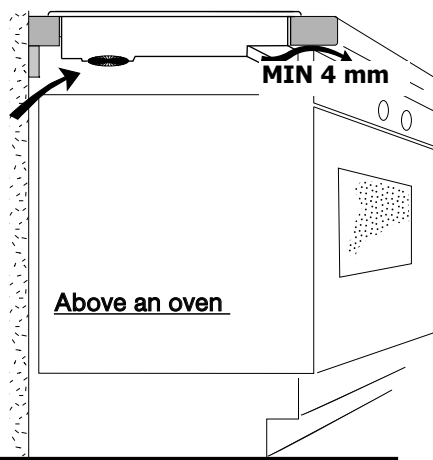

#### Tip

If your hob is located above your oven, the hob's thermal safety devices can impede the simultaneous use of the hob and the oven's pyrolysis program.

Your hob is equipped with an anti-overheating safety system.

This safety device can trigger, for example, when the hob is installed over an oven that is not sufficiently insulated. If this occurs, a series of small lines appears on the control panel. In such circumstances we recommend that you increase the hob's ventilation by creating an opening in the side of the cabinet, (8 x 5 cm), and/or installing an oven insulation kit available from the after-sales department.

• **HOOK-UP**

These hobs must be connected to the power grid via an electrical outlet that complies with EIC publication 60083 or an all-pole cut-off device that complies with installation regulations in effect.



When power is first supplied to your hob, or after an extended power outage, an indicator light will appear on the control panel. It automatically disappears after approximately 30 seconds, or as soon as any touch control on the control panel is pressed. This display is normal and, if needed, serves as an indication to the after-sales service staff. In all cases, the user of the hob should disregard it.



**Warning**


*If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or by a person with similar qualifications to avoid danger.*

• **220-240 V monophasic hook-up ~ -**

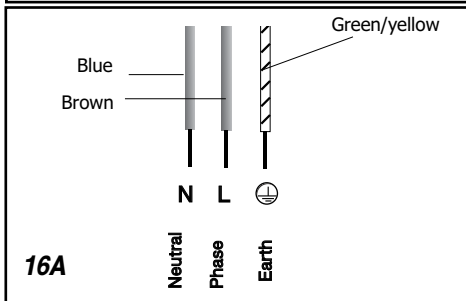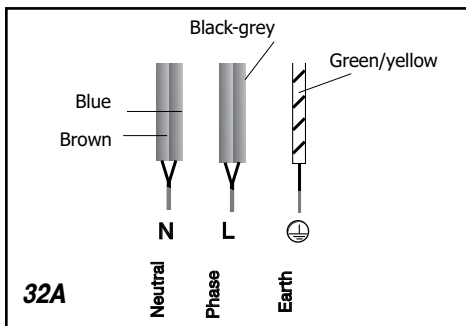

• **hook-up 400V 2N ~ - 16A**


Separate the two phase wires (L1 and L2) before hooking up.

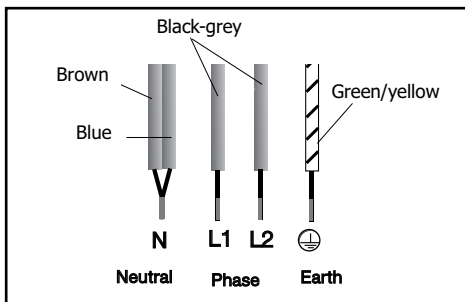


For a 400 V 2N triphase hook-up, if your hob malfunctions, check that the neutral conductor is properly connected.

• **hook-up 2x230V 2L+2N ~ - 16A**



Separate the wires before hooking up.

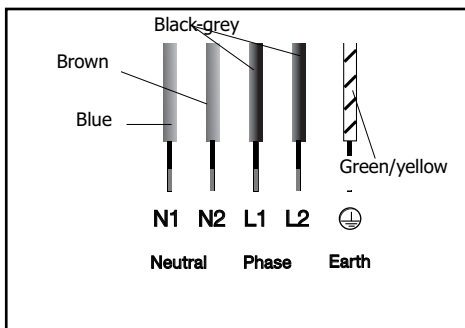

• **hook-up 400V 3 ~ - 16A**

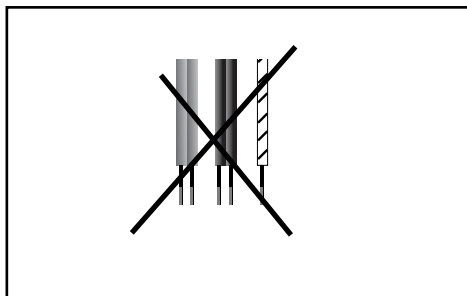


- **DESCRIPTION OF THE TOP**

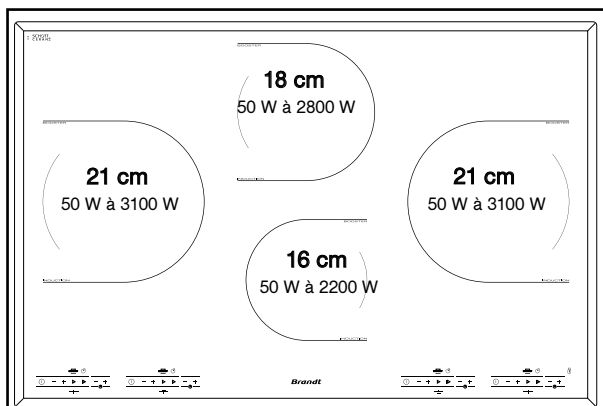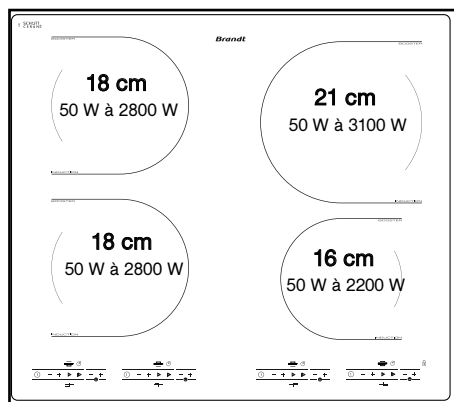**TI1082****TI1016**



• **COOKWARE FOR INDUCTION**

• *The induction principle*

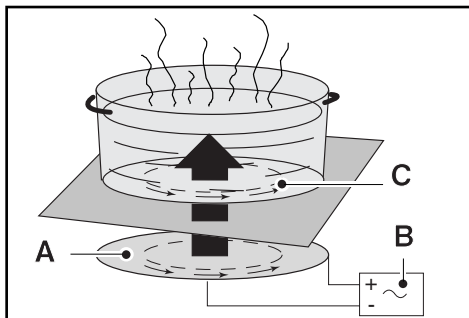

- A** Inductor
- B** Electronic board
- C** Induced electric current

The principle of induction is based on a magnetic phenomenon.

When you place your cookware on a cooking zone and you turn it on, the electronic boards in your cooking hob produce "induced" currents in the bottom of the cookware and instantly raise its temperature. This heat is then transferred to the food, which is simmered or seared depending on your settings.

• **Cookware**

Most cookware is compatible with induction. Only glass, terra cotta, aluminium without a special finish on the bottom, copper and some non-magnetic stainless steels do not work with induction cooking.

We recommend that you select cookware with a thick, flat bottom. The heat will be distributed better and cooking will be more uniform.



By choosing cookware that displays this logo on its bottom or on its packaging, you can be certain that it is perfectly compatible with your hob under normal operating conditions. To help you choose, a list of cookware is provided with this guide.

• **WHICH COOKING ZONE SHOULD YOU USE BASED ON YOUR COOKWARE?**

Cooking zone *	Cookware to use
<b>16 cm</b>	10 ..... 18 cm
<b>18 cm</b>	12 ..... 22 cm
<b>21 cm</b>	18 ..... 24 cm
<b>23 cm</b>	12..... 26 cm
<b>28 cm</b>	12 ..... 32 cm

\* (depending on the model)



**Tip**

**To check the suitability of your cookware:**

**Place the vessel on a cooking zone at power level 4.**


**If the display remains on, your cookware is compatible.**

**If the display flashes, your cookware cannot be used with induction cooking.**

**You can also use a magnet to test the cookware.**

**If a magnet "sticks" to the bottom of the cookware, it is compatible with induction.**

## • DESCRIPTION OF THE CONTROLS

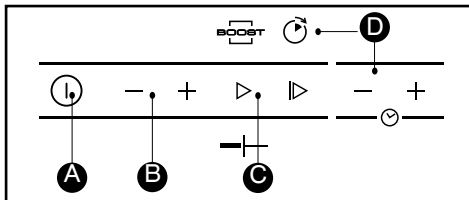

- A** On/Off button.
- B** Power level buttons.
- C** Power level preset setting buttons
- D** Timer buttons.

## • OPERATION

Press the on/off button for the cooking zone you want to use. A flashing **0** and a beep indicate that the cooking zone is on. You can then choose the desired power level.

If you do not select a power level, the cooking zone will automatically shut off after a few seconds.

## • OFF

Press the on/off button for the cooking zone used or the “-” power button until **0** is displayed.

## • ADJUSTING THE POWER LEVEL

Press the power - or + buttons.

When it is switched on you can move directly to maximum power “12” by pressing the “-” button.

### **Adjusting the power preset settings**

This function allows you to modify the power levels defined in the preset settings (except for the BOOST).

- Your cooking zone must be turned off.
- Select the preselection **▷** or **◁** to modify, by keeping your finger on it.
- Set the new power setting by pressing on the **+** or **-** button.
- A beep will confirm your action after a few moments.

N.B.:

- The power levels must be between:
- 1 and 7 for the first touch.
  - 8 and 12 for the second.

## • PREHEATING

This feature allows you to raise the temperature of your preparation quickly, so that you can proceed with your cooking at the power level you have chosen.

To use it:

- After setting the power to 12, choose the “PC” pre-heating function by pressing the “+” button a second time.
- The display will show “PC”.
- As long as this is displayed, you can change your cooking power level.
- A Beep confirms the setting.
- The display flashes alternately between “PC” and your cooking power level: you are in the “pre-heating” phase.
- At the end of the automatic pre-heating phase, your hob now only displays the cooking power level that you had selected originally. You have now come back to normal cooking mode.



### **WARNING**

- When the display shows “PC” (pre-heating), if you do not set the cooking power level, the cooking zone will turn off.
- The pre-heating time is calculated automatically by your hob depending on the cooking power level chosen.
- The pre-heating function cannot be used if the cooking power level is less than 6.
- If you press the power buttons while pre-heating is underway, this “pre-heating” will be cancelled. You come back to normal power setting mode.



### **Tip**

*If you are using several receptacles on the hob at the same time, try to use cooking zones located on opposite sides. On the same side, using the booster in one zone automatically limits the the cooking power level of the other zone visible in the display. This automatic limitation also applies when the pre-heating function is used.*

## • **SETTING THE TIMERS**

Each cooking zone has its own timer. It can be used as soon as the cooking zone is turned on.

To turn it on or change the timing, press the “+” or “-” buttons on the timer.


When setting longer cooking times, you can get to 99 min directly by pressing the “-” button straight away.


When the cooking is finished, 0 is displayed and a beep sounds. To cancel this information, press any button for the particular cooking zone being used. Otherwise, the information will disappear after a few moments.

To stop the timer manually, press “+” and “-” at the same time or return to 0 using the “-” button.


## • **TEMPO**

This function displays the time elapsed since the last time the power setting was adjusted for a given hotplate.

 
To use this function, press the  button. The time that has passed flashes on the timer display for the chosen burner.

If you want cooking to end in a specific period, press the  button then, in 5 seconds, press “+” on the timer to increase the cooking time that you wish to set. The time will display for 3 seconds, then the remaining cooking time will appear. A beep will confirm your choice.

This function can be used with or without the timer.

Note: If a time is displayed on the timer, this time cannot be modified for 5 seconds after the  button has been pressed. After these 5 seconds have elapsed, you can modify your cooking time.

## • CHILD SAFETY™ USE




Your hob has a child safety device which locks the controls when the hob is not in use (when cleaning for example) or when it is being used for cooking (to maintain your settings). Due to safety reasons, only the “stop” control is always active. It authorises a heating zone to be switched off even when the hob is locked.


### • How do you lock your hob?

Maintain pressure on the lock key until the led on top lights up and a beep confirms your maneuver.

### • Hob locked when in operation

The display of cooking zones in operation alternately indicates power and the locking symbol .

When you press the **power** or **timer** controls for the zones in operation, the lock led lights up. It will switch off after a few seconds. Only the “stop” control remains on at all times.

For cooking zones that are not in operation, the  symbol and the led light up when you press the “**start/stop**” controls

This display will switch off after a few seconds.

### • The hob is locked when switched off

The led above the lock key is switched off. Press this control briefly to switch on the led. The led displays when you press the **start / stop** key in any zone.

### • How do you unlock your hob?

Press the lock control until the led switches off and a double beep confirms your maneuver.





#### Tip

**Remember to unlock your hob before using it again (see chapter on “child safety use”).**

## • CLEAN LOCK

This function allows you to temporarily lock your hob while cleaning.

To activate Clean lock:

- Your cooking hob must be turned on or off.
- Briefly press touchpad  , A beep sounds and an indicator appears.
- After a predefined time, the lock will automatically disengage. A beep sounds and the indicator goes out.
- You can stop the Clean lock by holding down the button .

## • SAFETY DURING OPERATION

### • Residual heat

After intensive use, the cooking zone that you have just used can remain hot for several minutes.

An "H" is displayed during this period.

Avoid touching the hot areas during this time.

### • Temperature limiter

Each cooking zone is equipped with a safety sensor that constantly monitors the temperature of the bottom of the cookware. In the event that an empty vessel is left on a cooking zone that is on, this sensor automatically adjusts the power output of the hob, thereby avoiding any risk of damage to the cookware or the hob.

### • "Small Items" safety

A small object (such as a fork, a spoon, a ring, etc.) left alone on the hob is not detected as a piece of cookware.

The display flashes and no heat is produced.




### Warning

**Several small objects together on a cooking zone may be detected as cookware.**

**If the display remains on: power may be supplied and the objects may be heated.**

## • Protection against overflows

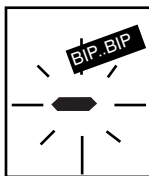

The hob may shut down (with the adjacent symbol in the display) automatically in any of these three situations:

- Overflow that spills onto the touch controls.
- Damp towel placed over the touch controls.
- Metallic object placed on the touch controls.

Clean the hob or remove the object, then begin cooking again.

### • Auto-Stop system

If you forget to switch off a cooking zone, your hob has an "Auto-Stop system" safety function which automatically cuts off the power to the cooking zone, after a predefined period (between 1 and 10 hours depending on the power used).

If this safety system is used, the cutoff to the cooking zone is displayed as "AS" or "A" on the control panel and a "bip" sounds for about 2 minutes. Simply press any of the control buttons to stop this.

A double bip will confirm your action.

## • PROTECTING YOUR APPLIANCE

Avoid hard shocks from cookware:

The vitroceramic glass worktop is very sturdy; however, it is not unbreakable.

Do not place any hot lids flat on your cooking hob. A suction effect may damage the vitroceramic surface.

Avoid dragging cookware across the surface, which may in the long-term result in the degradation of the decorative finish of the vitroceramic top.

Avoid placing cookware on the frame or cover (depending on the model).

Avoid using cookware with rough or bumpy bottoms: they can capture and transfer particles that may produce stains or scratches on your hob.

***These defects that do not result in appliance malfunction or do not make it unsuitable for use are not covered by the warranty.***

Do not store cleaning products or flammable products in the cabinet underneath your cooking hob.

Do not heat unopened canned goods; they may burst.

Of course, this precaution applies to all types of cooking.

Never use a sheet of aluminium for cooking. Never place items wrapped in aluminium foil or packaged in aluminium dishes on your cooking hob.

The aluminium will melt and permanently damage your cooking appliance.

Objects not intended for cooking should never be placed on the hob (risk of powering on, scratches, etc.).

Steam cleaning should never be used. The steam jet could damage your hob.

## • MAINTAINING YOUR APPLIANCE

TYPE OF STAINS/SPOTS	USE	WHAT TO DO
Light.	Disinfectant sponges.	Thoroughly moisten the zone to be cleaned with hot water, then wipe off.
Accumulation of baked-on soil. Overflow of sugary preparations, melted plastic.	Disinfectant sponges. Scraper for glass.	Thoroughly moisten the zone to be cleaned with hot water. Use a scraper for glass to remove the large bits, follow with the rough side of a disinfectant sponge, and then wipe off.
Rings and hard water residue.	White spirit vinegar.	Apply warm white vinegar to the stain, let stand, then wipe with a soft cloth.
Shiny metallic streaks. Weekly maintenance.	Cleaning agent for vitroceramic glass.	Apply a cleaning agent for vitroceramic glass (preferable one with silicone for its protective properties) to the surface.



Cream



Special disinfectant sponge for delicate dishes



Powder





Scouring sponge



### • During initial use

<i>YOU OBSERVE THAT:</i>	<i>POSSIBLE CAUSES:</i>	<i>WHAT SHOULD YOU DO:</i>
An indicator light appears.	Working normally.	Nothing.
Your installation blows a fuse.	The electrical hook-up of your hob is incorrect.	Verify the connections. See the "Hook-Up" section.
Only one side works.		
The hob produces an odour during the first cooking sessions.	New appliance.	Operate each cooking zone for 30 minutes with a saucepan full of water.

### • When powering on

<i>YOU OBSERVE THAT:</i>	<i>POSSIBLE CAUSES:</i>	<i>WHAT SHOULD YOU DO:</i>
The hob is not working and the indicator lights on the control panel are not on.	The appliance is not receiving electricity. The electrical supply is defective or the hook-up is incorrect.	Inspect the electrical circuit breaker and fuses.
The table is not working and another message is displayed.	The electronic board is functioning poorly.	Call the After-Sales Service Department.
The hob does not function, the information   is displayed.	The hob is locked.	See chapter on using the child safety system.

### • During operation

<i>YOU OBSERVE THAT:</i>	<i>POSSIBLE CAUSES:</i>	<i>WHAT SHOULD YOU DO:</i>
The hob stops working and it emits a beep approximately every 10 seconds and a  or "F7" is displayed.	There was an overflow or an object is in contact with the control panel.	Clean the hob or remove the object, then begin cooking again.
A series of small  or "F7" is displayed.	The electronic boards heated up.	See "Built-In" section.
After turning on a heating zone, the indicator lights on the control panel continue to flash.	The cookware used is not suitable for induction or is less than 12 cm in diameter (10 cm for the 16-cm cooking zone).	See section on cookware for induction.
The saucepans make noise during cooking. Your hob makes a clicking sound during cooking.	This is normal with some types of cookware. This is caused by the transfer of energy from the hob to the cookware.	Nothing. There is no risk, neither to your hob nor to your cookware.
The fan continues to function a few minutes after your hob is turned off.	Cooling of the electronic components. Working normally.	Nothing.



### **Warning**

***In the event that there is a break, crack or opening—even minor—in the vitroc ceramic glass, immediately disconnect your appliance to avoid the risk of electric shock. Contact the After-Sales Service Department.***

## • COOKING CHART

		FRY BRING TO A BOIL	COOK/BROWN RETURN TO BOILING BOILING LIGHT BROTHS	COOK/SIMMER	KEEP WARM					
		P 9 8	7	6	5	4	3	2	1	
<b>SOUPS</b>	<b>BROTHS</b>					●				
	THICK SOUPS						●			
<b>FISH</b>	<b>COURT BOUILLON</b>			●						
	FROZEN FOODS				●					
<b>SAUCE</b>	<b>THICK, FLOUR-BASED</b>					●				
	BUTTER-BASED WITH EGGS (BEARNAISE, HOLLANDAISE)					●				
	PREPARED SAUCES	P 9 8	7	6	5	4	3	2	1	●
<b>VEGETABLES</b>	<b>ENDIVES, SPINACH</b>						●			
	DRIED BEANS						●			
	BOILED POTATOES				●					
	GOLDEN BROWN POTATOES				●					
	SAUTEED POTATOES				●					
	DEFROSTING VEGETABLES						●			
<b>MEAT</b>	<b>MEAT, NOT TOO THICK</b>		●							
	STEAKS, IN SKILLET			●						
	GRILLED MEATS (CAST IRON GRILL)		●							
<b>FRYING</b>	<b>FROZEN FRENCH FRIES</b>	●								
	FRESH FRENCH FRIES	●								
		P 9 8	7	6	5	4	3	2	1	
<b>MISCELLA- NEOUS</b>	<b>PRESSURE COOKER (ONCE IT STARTS WHISTLING)</b>					●				
	COMPOTES				●					
	CRÊPES			●						
	CRÈME ANGLAISE		●							
	MELTED CHOCOLATE								●	
	JAMS				●					
	MILK		●							
	EGGS, FRIED			●						
	PASTA			●						
	JARS OF BABY FOOD (DOUBLE BOILER)				●					
	MEAT STEW		●							
	SPANISH RICE						●			
	RICE PUDDING						●			