

Brandt

FR GUIDE D'UTILISATION
DA BRUGERVEJLEDNING
EN GUIDE TO INSTALLATION
DE BETRIEBSANLEITUNG
CZ NÁVOD K POUÍTÍ
PT MANUAL DE UTILIZAÇÃO

Hotte décorative
Dekorativ emhætte
Decorative Hood
Dekor-Dunstabzugshaube
Dekorativní odsavač
Exaustor decorativo



FR 02

Dear Customer,

DA 18

*You have just acquired a **BRANDT** hood and we would like to thank you.*

EN 32

We have invested all our dedication and know-how in this appliance so that it would best meet your needs. With innovation and performance, we designed it to be always easy to use.

DE 46

CZ 60

*In the **BRANDT** product range, you will also find a wide choice of ovens, microwaves, cooking hobs, cookers, dishwashers, washing machines, driers, fridges and freezers, that you can coordinate with your new **BRANDT** hood.*

PT 74

Visit our website www.brandt.com where you will find all of our products, as well as useful and complementary information.

BRANDT

www.brandt.com

As part of our commitment to constantly improving our products, we reserve the right to make changes to them based on technical advances to their technical and functional features and appearance.



Warning:

Before installing and using your appliance, please carefully read this Guide to Installation and Use, which will allow you to quickly familiarise yourself with its operation.

1 / NOTICES TO THE USER

- Safety recommendations 34
- Environmental protection 35
- Description of your appliance 36

2 / INSTALLING YOUR APPLIANCE

- Using the evacuation mode 37
- Using the recycling mode 37
- Electrical connections 38
- Assembling the hood 39

3 / USING YOUR APPLIANCE

- Description of control panel 42

4 / CARING FOR AND CLEANING YOUR APPLIANCE

- Cleaning the filter cartridges 43
- Changing the carbon filter 43
- Cleaning the outer surfaces 43
- Changing the light bulb 43
- Maintaining your appliance 44

5 / TROUBLESHOOTING45

6 / AFTER-SALES SERVICE45

**Attention**

Keep this user guide with your appliance. If the appliance is ever sold or transferred to another person, ensure that the new owner receives the user guide. Please become familiar with these recommendations before installing and using your appliance. They were written for your safety and the safety of others.

• SAFETY RECOMMENDATIONS

– This oven was designed for use by private persons in their homes.

– This appliance is not designed to be used by people (including children) with reduced physical, sensorial or mental capacity or people lacking in experience or knowledge, except if they have the benefit, through the intermediary of a person responsible for their safety, of preliminary supervision or instruction concerning the use of the appliance. It is advisable to supervise children to make sure that they do not treat the appliance as a toy.

– When you receive the appliance, unpack or have it unpacked immediately. Give it an overall general inspection. Make note of any concerns or reservations on the delivery slip and make sure to keep a copy of this form.

– Your appliance is intended for standard household use. Do not use it for commercial or industrial purposes or for any other purpose than that for which it was designed.

– Do not modify or attempt to modify any of the characteristics of this appliance. This would be dangerous to your safety.

– Repairs must only be carried out by an approved specialist.

– Always unplug the hood before cleaning it or performing other maintenance acts.

– Provide adequate ventilation for the room in the case of simultaneous use of the hood and other appliances powered by an energy source other than electricity. This will prevent the hood from aspirating the combustion gases.

– You should never "flambé" dishes under the hood or operate gas rings under the hood without placing cookware on them (the flames sucked up into the hood can damage the appliance).

– When frying food under the appliance, you must carefully monitor the preparation at all times. Oils and grease brought to very high temperatures can catch fire.

– Respect the recommended frequency of cleaning and filter replacements. The accumulation of grease deposits may cause a fire.

– The hood should never be used over a combustible fuel burning stove (wood, coal, etc.).

– Never use steam or high-pressure devices to clean your appliance (requirement imposed by electrical safety).

– With a view to constantly improving our products, we reserve the right to modify their technical, functional or aesthetic characteristics, making any changes to their features considered necessary or desirable in view of technical progress.

– In order to easily locate the reference information for your appliance, we recommend that you note these data on the "After-Sales Service Department and Customer Relation

**Warning**

In the case of a kitchen heated by a device connected to a chimney (a stove, for example) the "recycling" version of the hood should be installed. Do not use the hood without metal filters.

Suitable ventilation should be provided in the room when the hood is used at the same time as appliances operated by gas or another combustible fuel.

• ENVIRONMENTAL PROTECTION

– This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.

– Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home.



– We thank you doing your part to protect the environment.



Warning


Installation should only be performed by installers and qualified technicians.



Warning

Remove the protective film from the filter cartridge before use.

• DESCRIPTION OF YOUR APPLIANCE

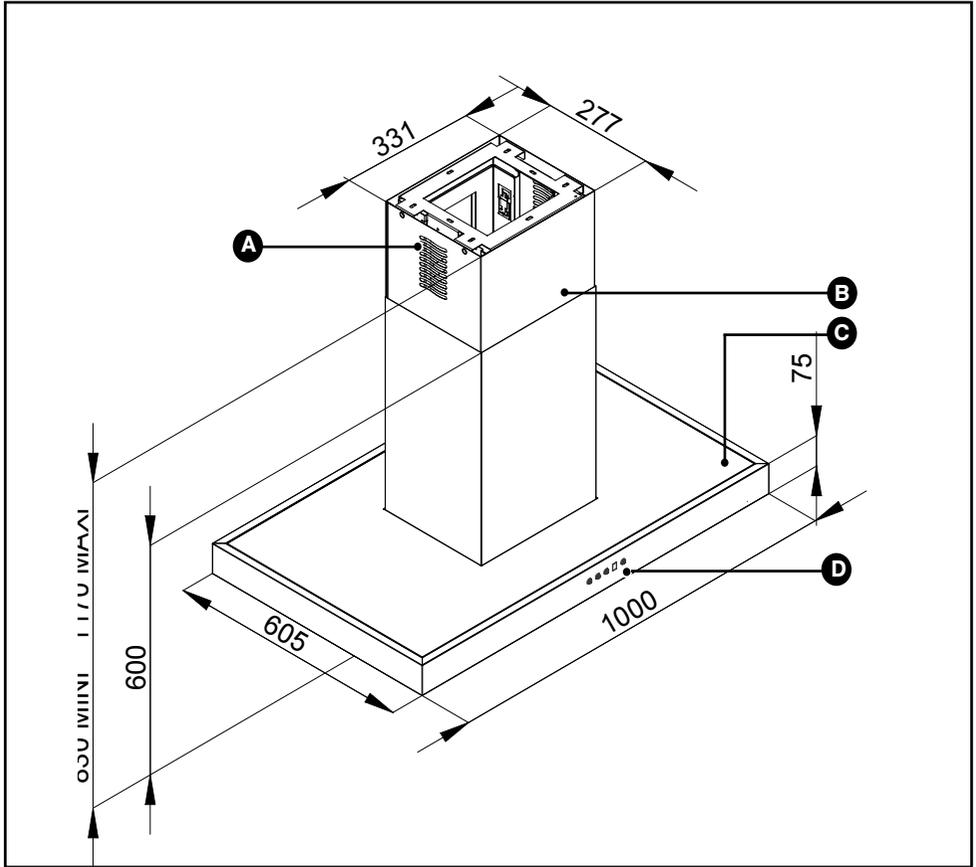

A Vents

C Top surface

B Ventilation shaft

D Control panel


- 2 people are required to correctly install this appliance (approx. 30 kg).
- During installation of the hood, place the product packaging on the cooking surface to protect it in the event of the hood falling down.
- The appliance must be unplugged during installation or when any repair or maintenance work is being performed.
- Ensure that the network voltage corresponds to the voltage noted on the identification plate located inside the hood.
- If the electrical installation at your residence requires any changes in order to hook up your Appliance, call upon a professional electrician.
- If the hood is being used in evacuation mode, do not connect the appliance to a combustion gas exhaust duct (boiler, chimney, etc.) or to a CMV (controlled mechanical ventilation) system.
- Under no circumstances should the exhaust duct empty into the attic.
- Install the hood at a safe distance of at least 70 cm from an electric, gas or combined cooking hob.

• USING THE EVACUATION MODE

If you possess an outlet to the exterior

(fig. 1)

Your hood can be connected to this outlet using a flue (minimum diameter 125 mm that is enamelled, in aluminium, flexible or made of inflammable material). If your flue is less than 125 mm in diameter, **you must use the recycling mode.**

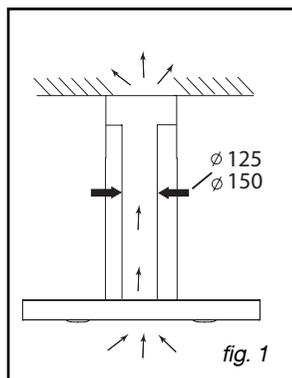

• USING THE RECYCLING MODE


If you do not possess an outlet to the exterior

(fig. 2)

All of our appliances can be used in recycling mode.

In this case, you should add an active carbon filter which will keep in odours.

(See Chapter 4: Changing the carbon filter.)

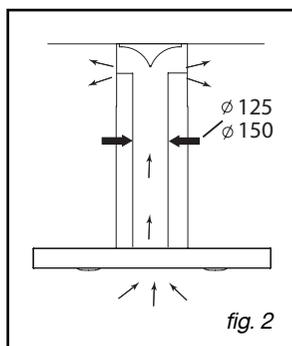

• ELECTRICAL CONNECTIONS

During installation and maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be cut off or removed.

The electrical connection must be made before completely fixing the ventilation shaft to the ceiling.

Ensure that:

- the electrical installation has sufficient voltage,
- the electrical wires are in good condition,
- the diameter of the wires complies with the installation requirements.



Warning

This appliance is delivered with a H 05 VVF power cord. It must be connected to the main power supply (which should be a 220-240 V single phase current) via a CEI 60083 standardised socket that should remain accessible after installation, in keeping with installation guidelines.

We cannot be held responsible for any accident resulting from an inexistent, defective or incorrect ground lead. The fuse for your installation must be 10 or 16A. If the power cable is damaged, call the after-sales service department in order to avoid danger.



Warning

If the electrical installation at your residence requires any changes in order to hook up your appliance, call upon a professional electrician.



Warning

If the hood displays any malfunctions, unplug the appliance or remove the fuse corresponding to the electrical socket where your appliance is plugged in.



Warning

The hood must be installed in compliance with all applicable regulations concerning the ventilation of premises. In France these regulations are described in DTU 61.1 from the CSTB. In particular, the evacuated air should never be conveyed to a duct used to evacuate smoke from appliances that use gas or other combustible fuels. Unused ducts may only be used after approval from a competent specialist.



Important

The accessible parts of this appliance may become hot if it is used with a cooking appliance.

**Tip**

For optimal use of your appliance, we recommend you connect the hood to a 150 mm-diameter flue (not delivered with the appliance). Minimise the number of angles and bends and the length of the flue. If the hood is to be used for outdoor evacuation, you should ensure a sufficient inflow of fresh air to avoid a pressure deficiency in the room.

A : Ceiling bracket

B : Deflector (recycling mode only)

C : Ventilation shaft bracket

D : Flue (not delivered with the appliance)

E : Telescoping ventilation shafts


Vent up : recycling mode

Vent down : evacuation mode

F : Adapter (to be used depending on the size of the flue)

G : Back-flow valve (for outdoor evacuation only)

H : Motor bracket

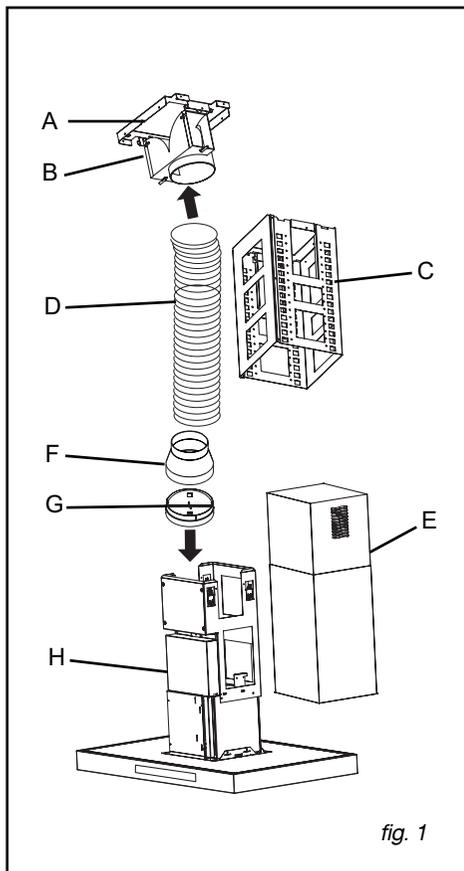

• **ASSEMBLING THE HOOD**



The minimum distance between the cooking surface and the lowest part of the hood must be 70 cm. If the instructions for the hob installed under the hood specify a distance of more than 70 cm, this requirement must be respected.

– With the aid of a lead wire, align the centre of the cooking surface with the ceiling bracket (fig.2).

– Notch A in the ceiling bracket must be facing the appliance (Fig.2).


- Fix the ceiling bracket in place using the 6 screws and wall plugs supplied.

- If your hood is in recycling mode, fix the deflector to the ceiling bracket using the 2 screws supplied (fig 3 recycling).

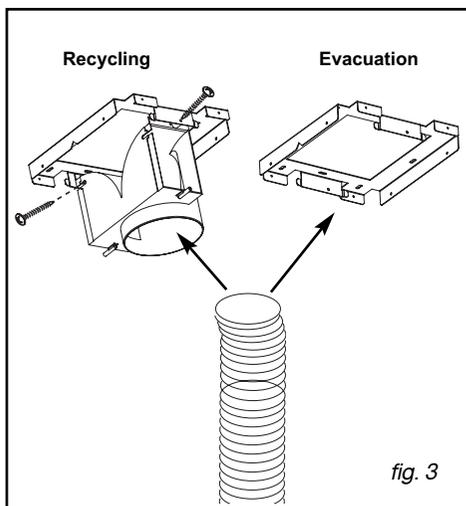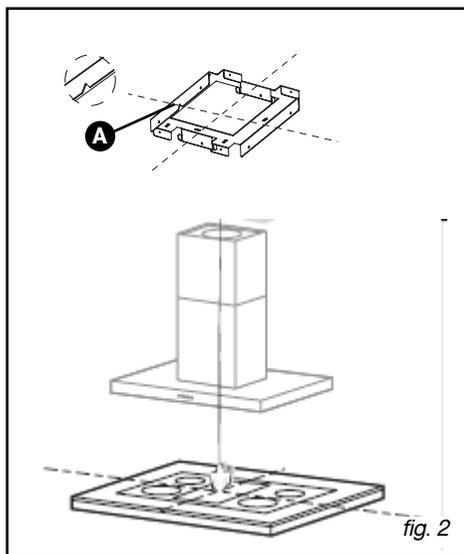

- Connect the flue to the deflector (recycling mode), or to another flue leading away from the ceiling (evacuation mode).

- When the ventilation shaft bracket has been correctly fitted, screw in the 4 screws to hold the hood bracket in place (fig.4).

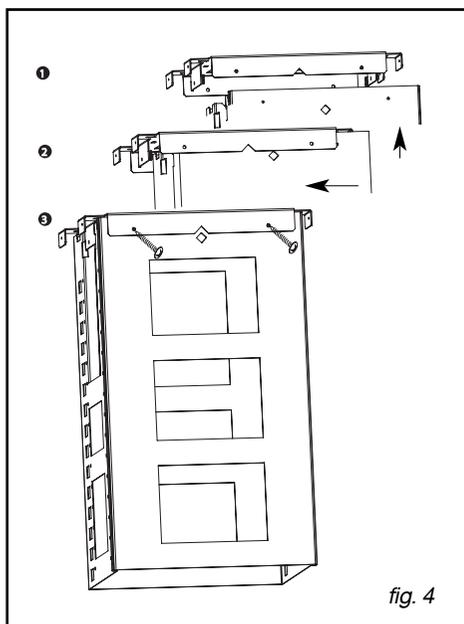

Important! Do not forget to remove the cables before assembling the hood completely.

– In outdoor evacuation mode, fit the back-flow valve to the motor outlet (fig. 5-B). This back-flow valve allows obstruction of air entering from outside.

– If you are using a 125 mm diameter flue, use the adapter supplied (fig. 5-A).

If your outdoor flue has a diameter of less than 125 mm, you must connect your hood in recycling mode.

– Fit the end of the flue to the motor outlet (for recycling mode) or to the back-flow valve (for evacuation mode).

– Fit the ventilation shafts (fig.6-A), taking care to position them as follows if the hood is in recycling mode, the vents must be facing upwards so that they are visible.

– Press on the top part (B) to insert the hood in the ventilation shaft bracket.

– The hood is supported from the first notch (1st click).

– You may then adjust the height of the appliance, pushing it up towards the ceiling (at least 70 cm above your cooking hob).

– When the appliance is at the required height, **you must then fix it in place with the 4 screws supplied** (fig.7-C).

– Then fit the interior ventilation shaft in place again and screw in the 4 screws (fig.8-D).

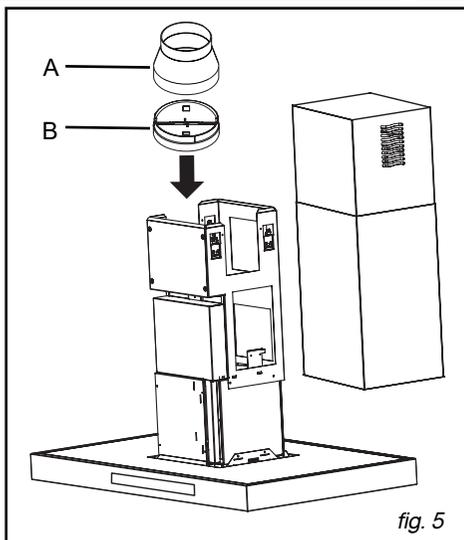


fig. 5

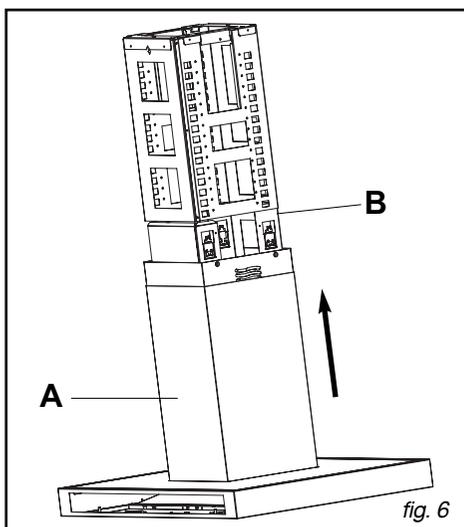


fig. 6

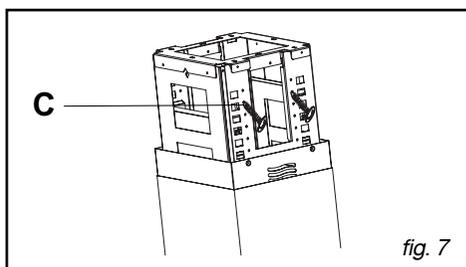


fig. 7


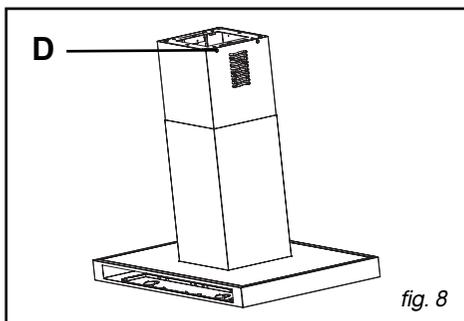


fig. 8

• **DESCRIPTION OF CONTROL PANEL**

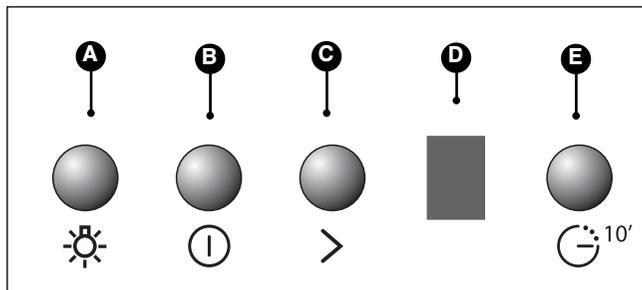

- A** Lighting
- B** On/Off
- C** Speed selection (1 to 4)
- D** Indicator
- E** Timer/Delayed shutdown (10 Min)

 Speed display (1, 2, 3 or 4)

 Filter saturation

• **Speed selection**

- Every time the speed selection button  is pressed, the following cycle is defined: speed 1, 2, 3 or 4 then return to speed 1.
- Every time the hood is used it will start up at the speed 1.

• **Timer selection**

- Pressing  will activate the timer; the hood will shut down after 10 minutes. The speed will flash on the display to tell you that the hood is in timer mode.

• **FILTER CARTRIDGE SATURATION INDICATOR**

The  symbol will flash on the display after 30 hours of operation of the hood. This message tells you that it is necessary to clean your filter cartridge.

After cleaning the filter cartridge, press button  for 3 seconds to stop the warning light 



Tip

This Guide to Installation and Use is valid for several models. Minor differences in details and fittings may emerge between your appliance and the descriptions provided.

**Warning**

Always unplug the hood before cleaning it or performing other maintenance acts. Regular maintenance of your appliance is a guarantee of proper functioning, good performance and durability.

**Warning**

Failure to respect the guidelines for cleaning the appliance and filters may cause fires. Please carefully adhere to the maintenance recommendations.

• CLEANING THE FILTER CARTRIDGES

They must be cleaned after approximately 30 hours of use or at least once a month. These filters can be cleaned in a vertical position in your dishwasher. Use a brush, hot water and mild detergent.

Rinse and dry them thoroughly before returning them to the hood.

• Dismantling the filter cartridge (fig.1)


- Replace it after approximately 120 hours of use.
- Remove the filter cartridge by unclipping it (fig. 1).

• CHANGING THE CARBON FILTER (not supplied)

The carbon filter should be replaced after approximately 120 hours of use.

- Unclip the filter cartridge to remove it (A.fig. 1).
- Remove the carbon filter or the plastic protection grille (B.fig.1)
- Inset the new carbon filter.

If you do not intend to use a carbon filter, leave the plastic protection grille in place.

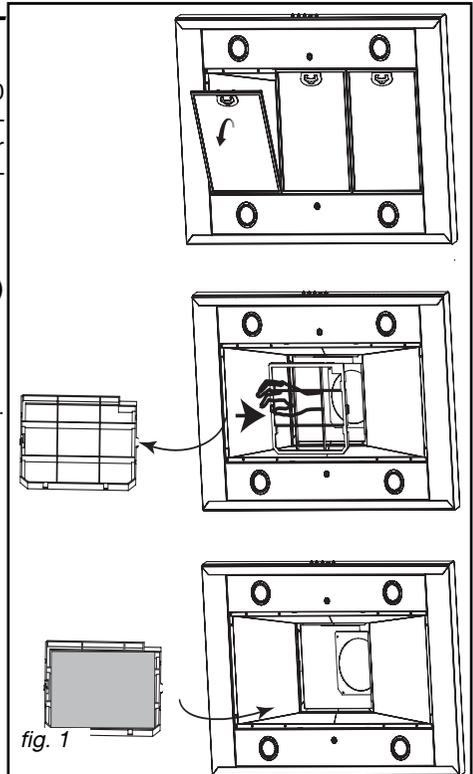


• CLEANING THE OUTER SURFACES

To clean the outside of your hood, use soapy water, but do not use abrasive creams or scrubbing sponges.

• CHANGING THE LIGHT BULB

Model with halogen bulb

- Remove the lighting port (fig. 2).
- Change the G4-20W-12V halogen bulb.
- Replace the bulb by repeating these steps in reverse order.

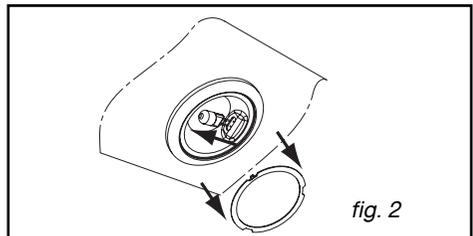



Warning

Before carrying out any work, the power supply to the hood must be turned off, either by unplugging it or by using the circuit breaker switch.

• MAINTAINING YOUR APPLIANCE

MAINTENANCE TO USE	WHAT TO DO	PRODUCTS/ACCESSORIES
Top surface and accessories	Never use metal scouring pads, abrasive products or excessively stiff brushes.	To clean the body and the lighting port, you should use only commercial household cleaning products diluted in water and then rinse using clean water, drying with a soft cloth.
Filter cartridge	This filter traps fatty vapours and dust. This component plays an important role in ensuring the effectiveness of your hood. In the event of tough stains, use a non-abrasive cream, then rinse with clean water.	Use a commercial household cleaning product then rinse abundantly and dry. These filters can be cleaned in a vertical position in your dishwasher. (Do not allow them to touch dirty dishes or silverware).
Activated carbon filter (Depending on model or optional)	This filter traps odours and must be changed at least once a year depending on your level of use. You should order these filters from your dealer and note the date the filter was changed.	

To preserve your appliance, we recommend that you use Clearit cleaning products.



Professional expertise serving individuals

Clearit offers you professional products and solutions designed for the daily care of your household appliances and kitchens.

They are on sale at your regular retailer, along with a complete line of accessories and consumable products.

SYMPTOMS	SOLUTIONS
The hood is not working...	Ensure that: <ul style="list-style-type: none"> • The power is not cut off. • A speed has been selected.
The hood is not operating effectively...	Ensure that: <ul style="list-style-type: none"> • The selected motor speed is sufficient for the quantity of smoke and vapours to be cleared. • The kitchen is sufficiently ventilated to allow for fresh air intake. • The carbon filter is not worn (hood operating in recycling mode).
The hood stopped working	Ensure that: <ul style="list-style-type: none"> • The power is not cut off. • The single-pole cut-off device was not activated.

6 / AFTER-SALES SERVICE

Any maintenance on your equipment should be undertaken by a qualified mechanic who is an authorised agent for the brand appliances. When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment (Fig. 1).

